


2. Removal of Sash

Check new windows before you tear out opening.
Making sure you have the correct amounts and sizes.

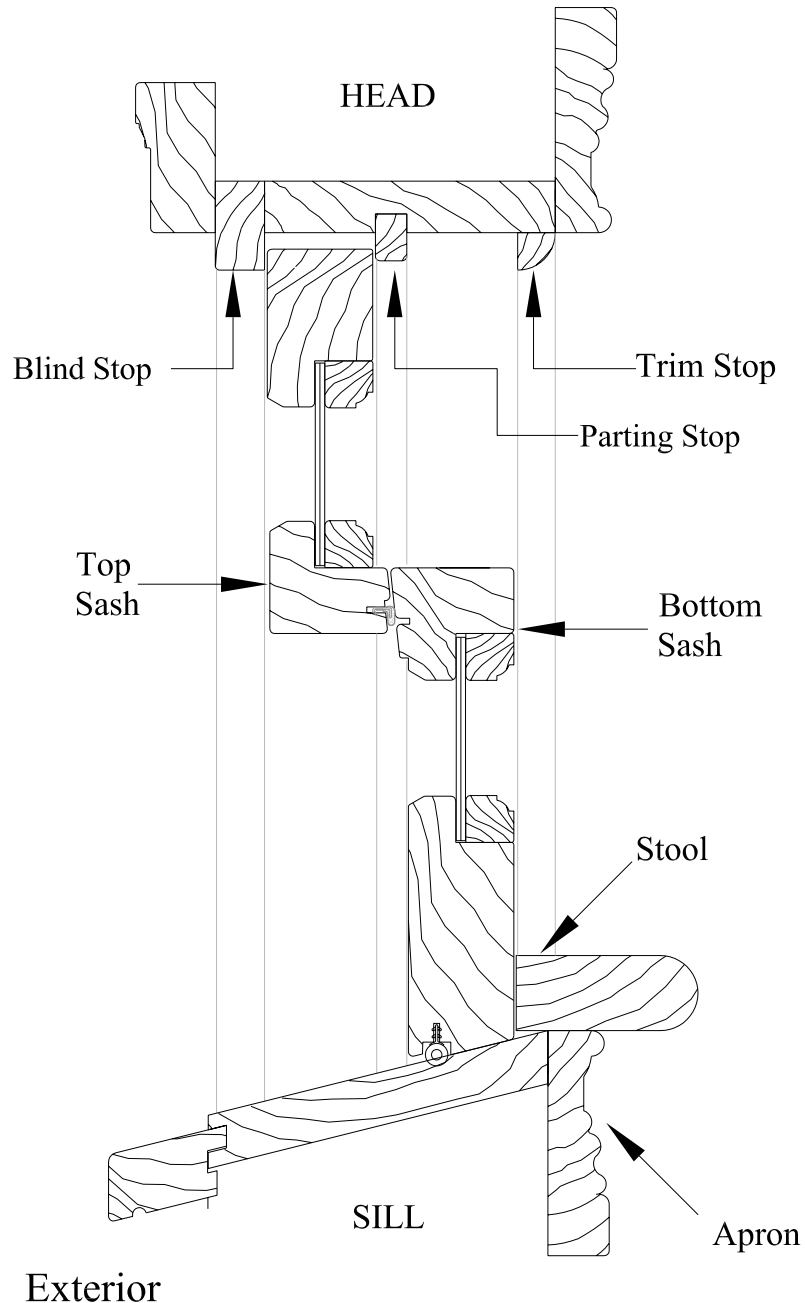

FROM INSIDE THE HOUSE

1. Carefully remove all inside trim or stops, since you will reuse this material.
2. Disconnect the balance and remove the bottom and top sash.
3. Remove the jamb liner.
4. Remove the middle parting strips at the sides and top.
5. Leave the exterior stop (blind stop) intact to prevent the replacement window from falling through.
6. Clean opening thoroughly and clauk or use batt insulation to fill any old holes.

FROM OUTSIDE THE HOUSE

1. Carefully remove all outside blind stops, since you will reuse this material. (a reciprocating saw may be needed when the blind stop runs behind the Brick Mold)
2. Disconnect the balance and remove the bottom and top sash.
3. Remove the jamb liner.
4. Remove the middle parting strips at the sides and top.
5. Leave the interior stop (trim stop) intact to prevent the replacement window from falling through.
6. Clean opening thoroughly and clauk or use batt insulation to fill any old holes.

